

# Recessed PAR8-NC

## Installation Instructions

**CAUTION!** READ AND FOLLOW ALL SAFETY AND INSTALLATION INSTRUCTIONS CAREFULLY. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION.

**WARNING** - Before starting installation, disconnect power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Do not install any luminaire assembly closer than 6" from any curtain or similar combustible materials. Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components. Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician. Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **Consult a qualified electrician before installing. Work should be performed by qualified personnel.**

Suitable to install on **"Dimming Circuits"**.

SAVE THESE INSTRUCTIONS



1. Before starting installation, turn **OFF** electrical power to the existing fixture.



2. Connect **BBORP□**  
**BOPO□**  
**IRPO□**




3. Unscrew the snout.



4. Push springs back and Insert fixture and springs into opening. Make sure the fixture is pointed straight down.



5. Push Fixture into opening. There will feel spring resistance and fixture will snap in place.

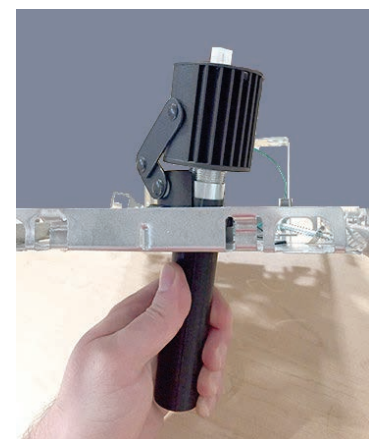

7. Use the threaded side of the adjustment tool to aim/focus the light.

# Recessed PAR8-NC

## Installation Instructions

---



8. Insert snout into unthreaded side of the adjustment tool



9. Use the adjustment tool to screw snout back into place.



10. Restore power and check the operation of your new **CLARTÉ** light fixture.

---

## Servicing LED Driver



Opening is large enough for driver to be pulled out and serviced.