

# RR3/RS3-AH-T

## Installation Instructions (Architectural Housing)

**CLARTÉ**  
LIGHTING

### CAUTION!

READ AND FOLLOW ALL SAFETY AND INSTALLATION INSTRUCTIONS CAREFULLY. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION.


**WARNING** - Before starting installation, disconnect power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Do not install any luminaire assembly closer than 6" from any curtain or similar combustible materials. Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components. Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician. Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **Consult a qualified electrician before installing. Work should be performed by qualified personnel.**

SAVE THESE INSTRUCTIONS

1. Choose the location for the fixture, taking into consideration the size of the Housing of **11" x 15.4" x 5.75"** clearance from any combustible material.
2. Remove a neighboring ceiling tile for access to the installation location.
3. Spread the hanger bars so they attach on the suspended ceiling grid frame and secure properly.
4. Attach two support wires (not included) to T-Bar or suspension runners.  
**Note:** Failure to do this could result in the collapse of the ceiling tile.
5. Supply power whip.

Connect Electrical supply whip to J-Box and replace snap-lock cover.

6. Remove the ceiling tile, **Cut a 4.125" in diameter** opening in the appropriate location and replace it onto the ceiling grid.

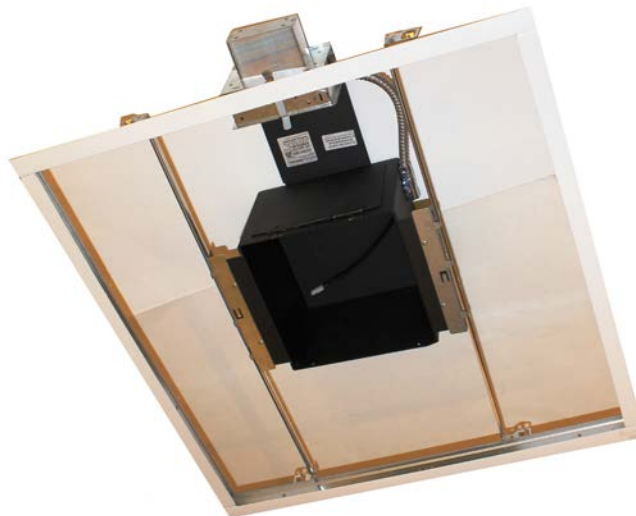

**Continue Instructions on back of this page**


# RR3/RS3-AH-T

Installation Instructions (*Architectural Housing*)

**CLARTÉ**<sup>™</sup>  
LIGHTING



7. Connect male connector to female molex plug.

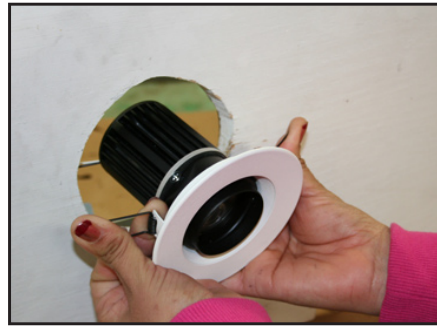

8. Push springs back and Insert fixture and springs into opening.



9. Push Fixture into opening. There will feel spring resistance and fixture will snap in place.



10. Restore power and check the operation of your new **CLARTÉ** light fixture.