


PAR8-Adjustable Remote Recessed


Installation Instructions

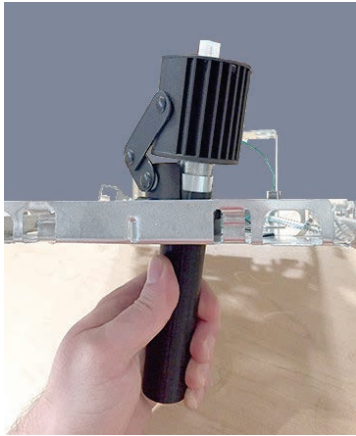

7. Use the threaded side of the adjustment tool to aim/focus the light.



8. Insert snout into unthreaded side of the adjustment tool

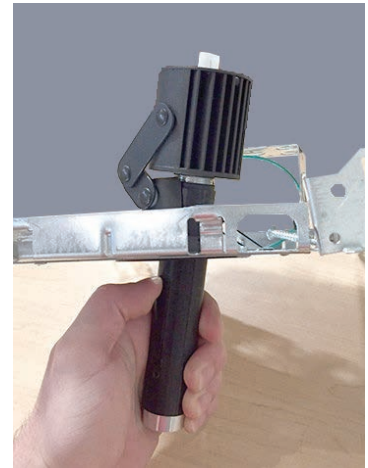

9. Use the adjustment tool to screw snout back into place.



10. Restore power and check the operation of your new **CLARTÉ** light fixture.