

RR6-615-D-NC-PAR30

Recessed Downlight

Installation Instructions


(Dimmable)(New Construction)

CLARTÉ™ LIGHTING

Wiring

5. Feed the flex with the supply wires to the junction box.
Connect Ballast Black wire to Power Black wire.
Connect Ballast White wire to Power White wire.
Connect ground wires to J-Box and replace snap-lock cover.

Wiring Diagram

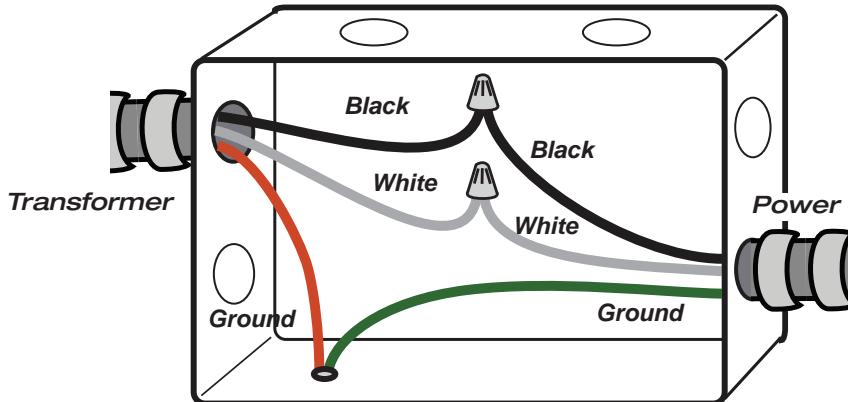

6. Pull Transformer Pig Tail through opening



7. Plug in fixture pig Tail to Transformer Pig Tail



8. Push LED Fixture Assembly through opening.



9. Attach the fixture to the bridge provided using the two screws.



10. Restore electrical Power and check the operation of your new CLARTÉ light fixture.