

SR6-643-PAR16

6" Stem Hung Cylinder Fixture Installation Instructions



CLARTÉ™ LIGHTING

CAUTION!


READ AND FOLLOW ALL SAFETY AND INSTALLATION INSTRUCTIONS CAREFULLY. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION.

SAVE THESE INSTRUCTIONS


WARNING - Before starting installation, disconnect power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Do not install any luminaire assembly closer than 6" from any curtain or similar combustible materials. Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components. Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician. Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **Consult a qualified electrician before installing. Work should be performed by qualified personnel.**

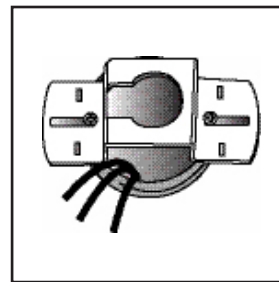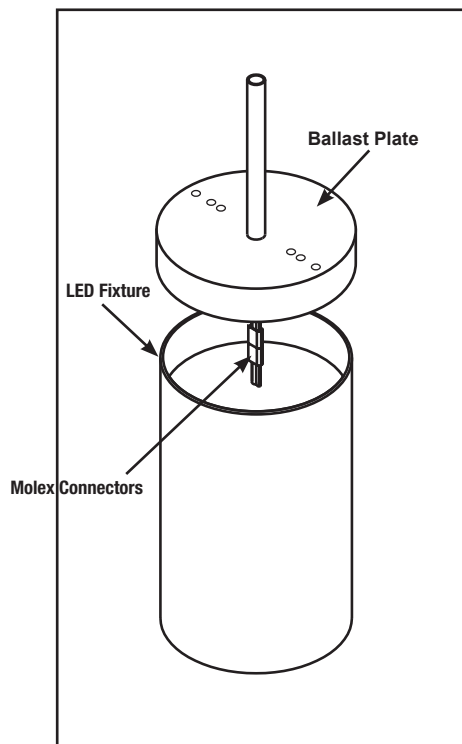


1. Install canopy hanger bracket with (2) two screws provided onto J-Box (J-Box by others).

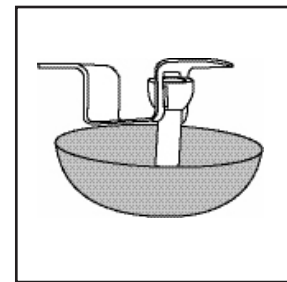

2. Slip canopy plate over stem, then install stem mount into canopy hanger bracket as shown.

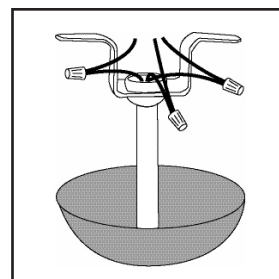

3. Make wire connections as shown. Power WHITE to Ballast WHITE, Power BLACK to Ballast BLACK, and Ground to a grounded wire or source.

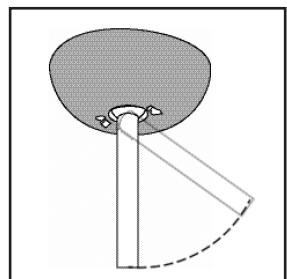

4. Attach canopy plate onto canopy hanger bracket. Stem swings up to 35°.