

MR1-632-PAR16

Optic Installation Instructions

CLARTÉ
LIGHTING™

CAUTION!


READ AND FOLLOW ALL SAFETY AND INSTALLATION INSTRUCTIONS CAREFULLY.
TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION.




1. Connect bi-pin wire from optic to driver



2. Position the fixture so that the back plate can fit into the hole.

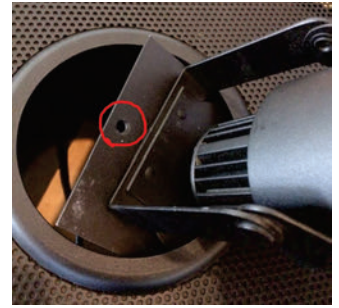

3. Position the back plate so the screw hole lines up with the fixture as pictured.

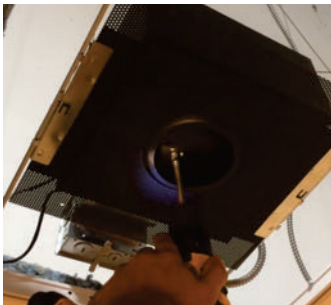

4. Push up light fixture into top housing to access screws and screw fixture into top housing (2 screws, use magnetic tip screwdriver).