

Absolute Light 2.0

Installation Instructions

CLARTÉ
LIGHTING

CAUTION!



READ AND FOLLOW ALL SAFETY AND INSTALLATION INSTRUCTIONS CAREFULLY. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION.

WARNING - Before starting installation, disconnect power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Do not install any luminaire assembly closer than 6" from any curtain or similar combustible materials. Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components. Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician. Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation. **Consult a qualified electrician before installing. Work should be performed by qualified personnel.**


SAVE THESE INSTRUCTIONS




1. Match up wires and plug in firmly.

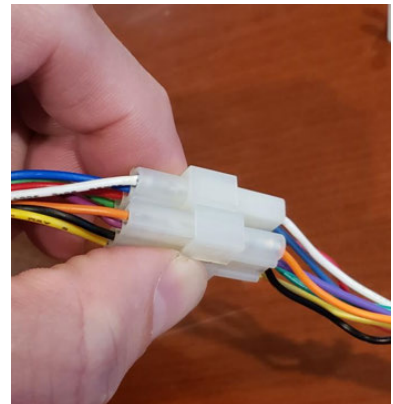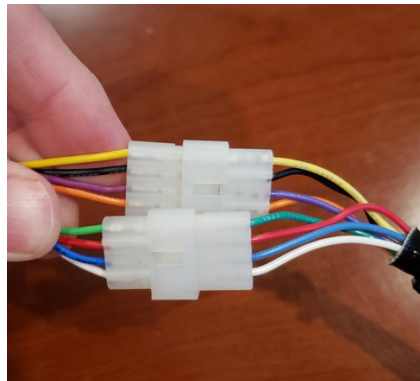


2. Stack plugs against each other.

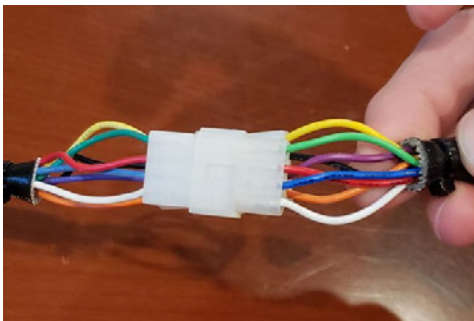


3. Separate outer wires.

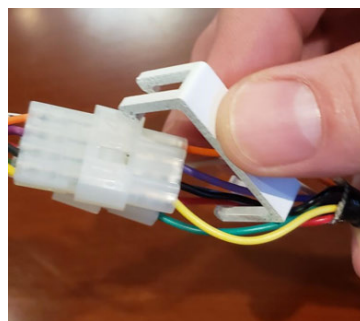

4. Begin to insert Plug Lock from one side, keeping the outer wires on the outside.

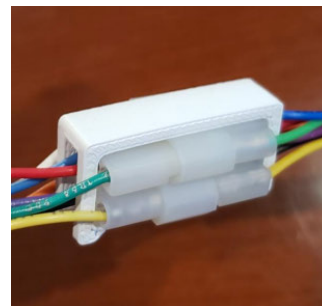


5. Fully press Plug Lock into place, securing plugs together.

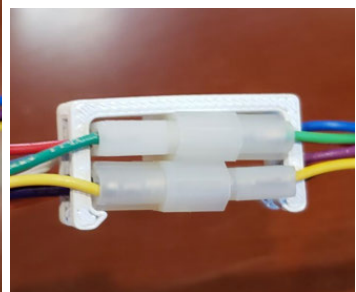


Absolute Light 2.0


Installation Instructions

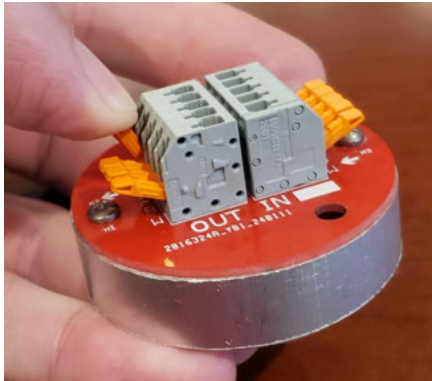


6. Flip down all tabs on WAGO Wiring Dongle to the 'open' position.

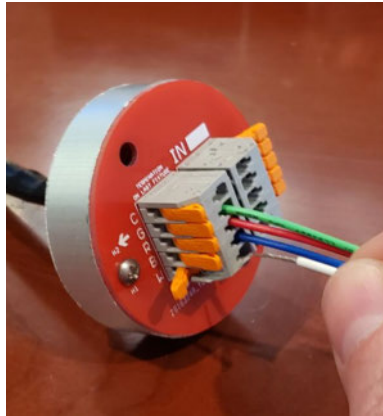


7. Plug in wires according to manufacturer's instructions.

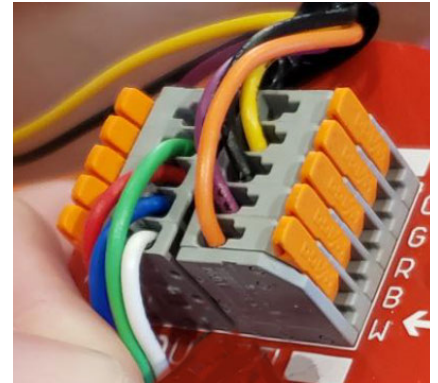


8. Make sure all tabs are flipped back into the 'closed' position.

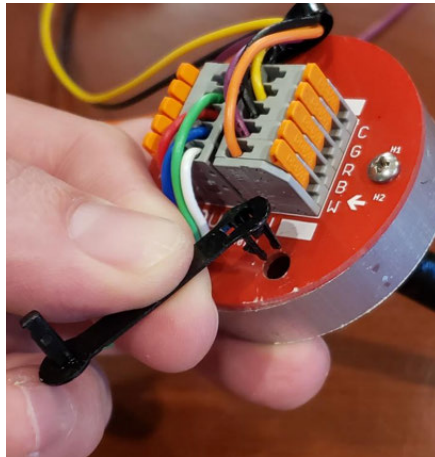

9. Insert Wire Strain Relief Tab into hole shown above.

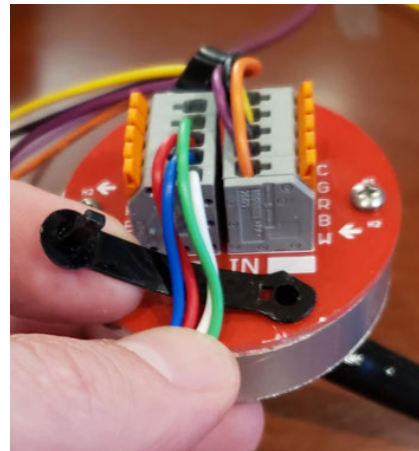

10. Bundle wires and bend Wire Strain Relief Tab over wires.

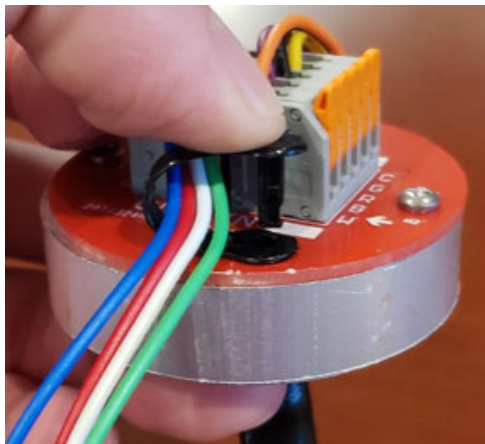

11. Bend Wire Strain Relief Tab over itself and insert male end into female end. Press down firmly to lock into place. **WARNING:** Once locked it will need to be broken to be removed.

